



COVER EACH HALF OF WING SEPARATELY WITH PRE-SHRUNK JAP TISSUE. THEN ATTACH MOTOR STICK CLIPS USING MOTOR STICK AS GUIDE

NOTE: NO DIHEDRAL OR RUDDER

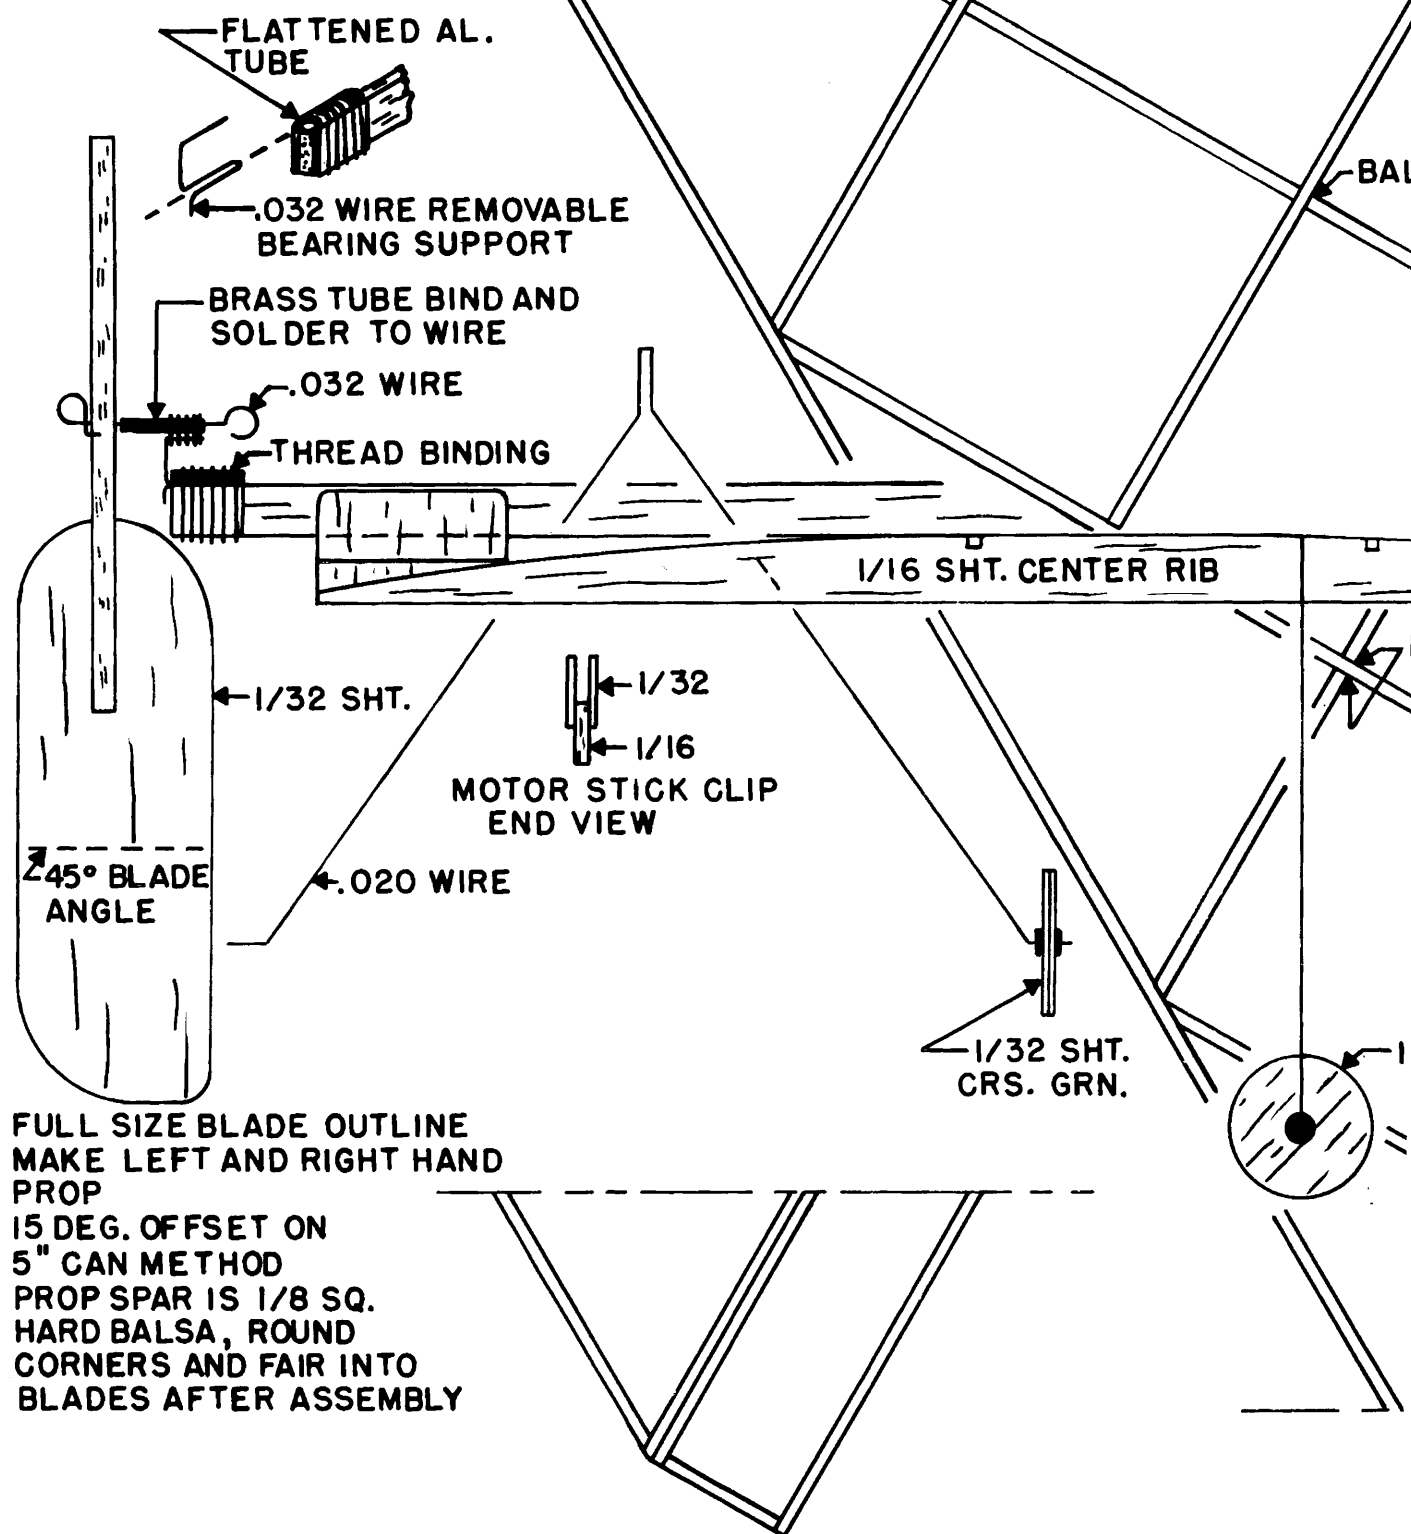

LEADING, TRAILING EDGES PARS ARE 1/16 SQ.

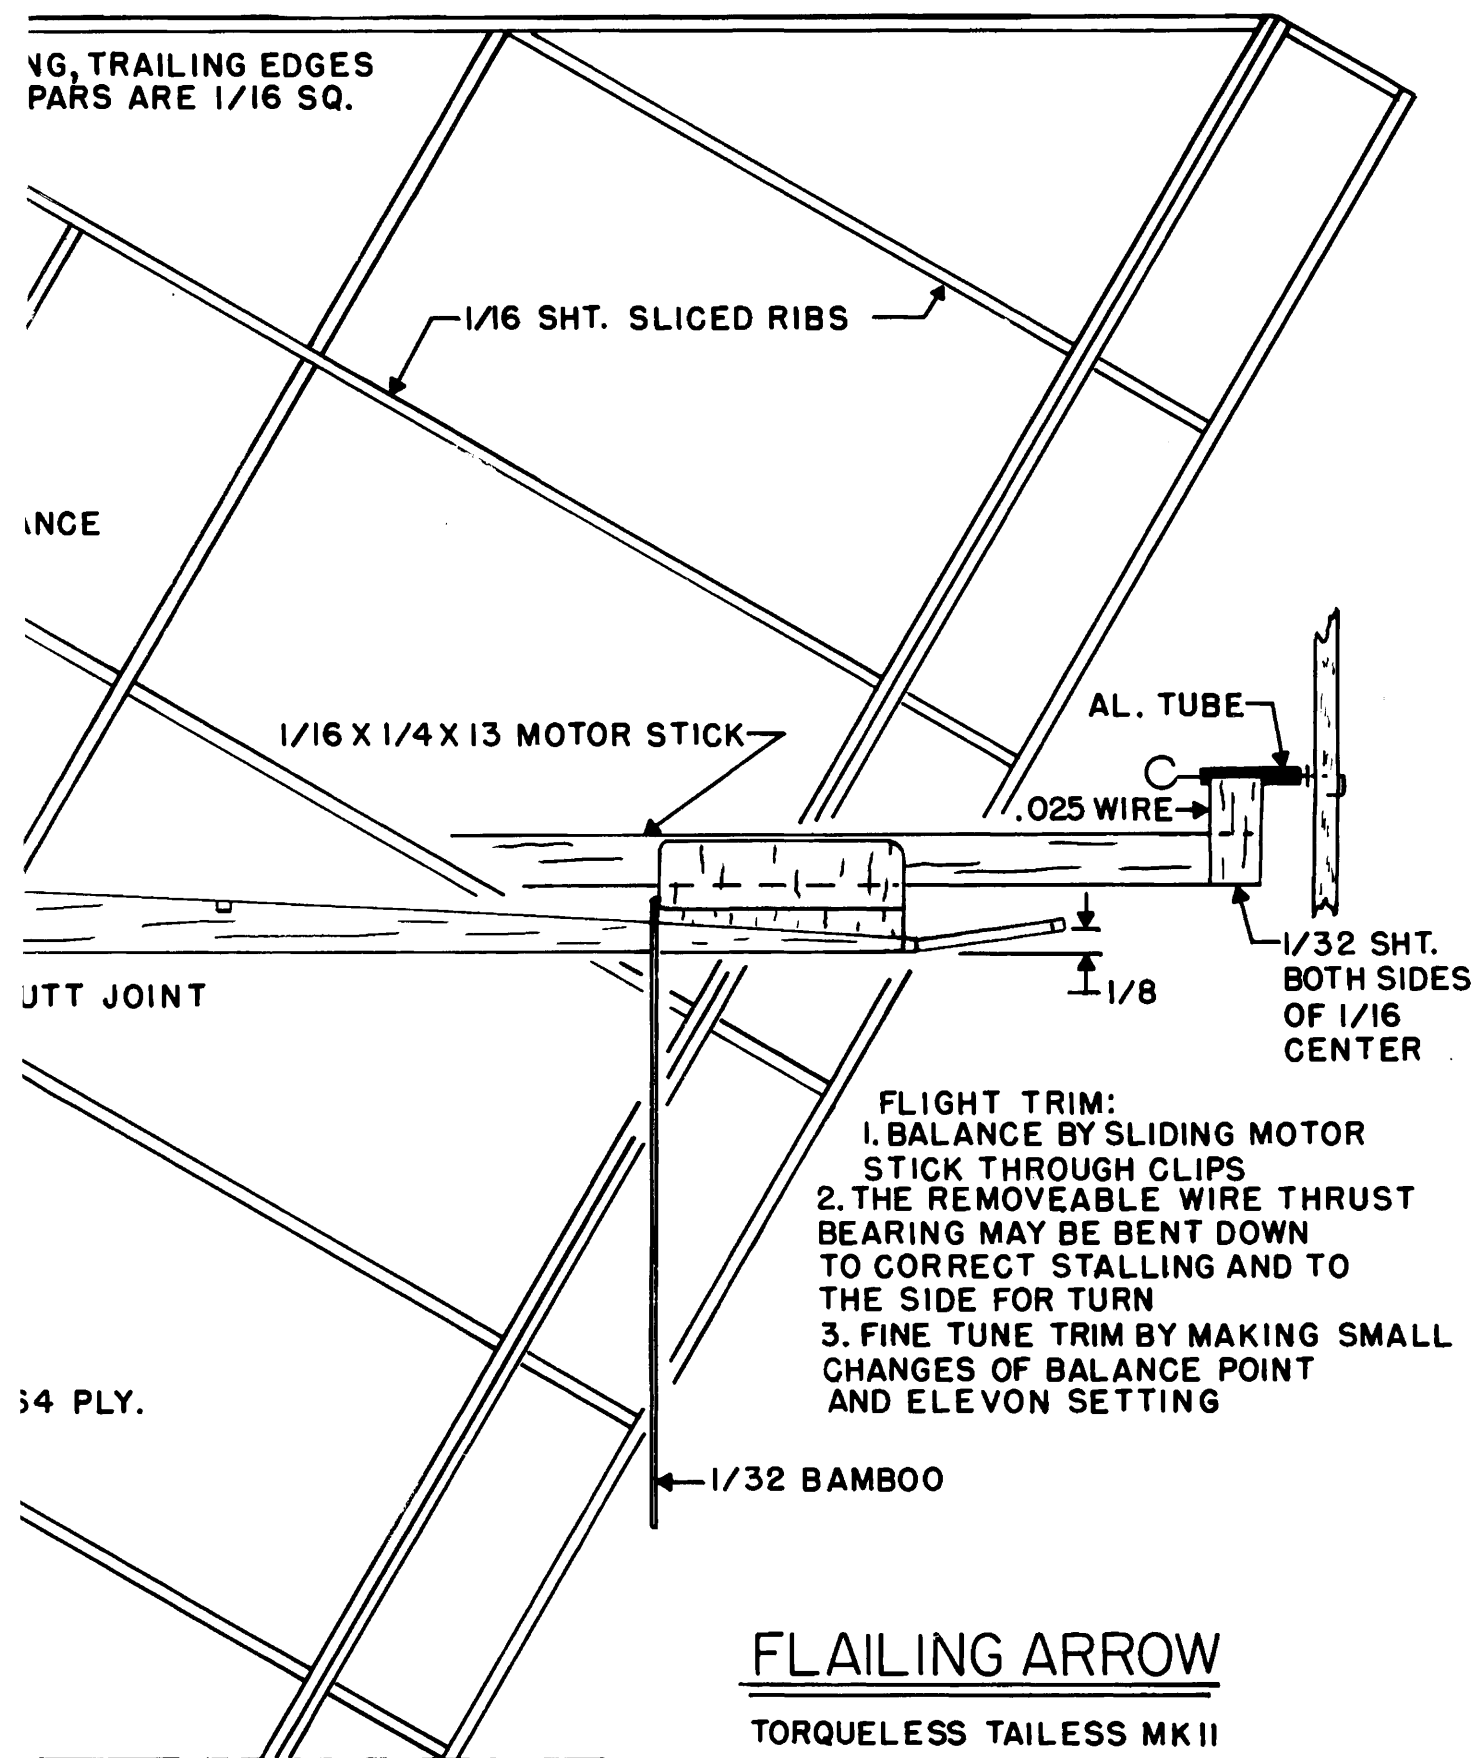

FLIGHT TRIM:  
1. BALANCE BY SLIDING MOTOR STICK THROUGH CLIPS  
2. THE REMOVEABLE WIRE THRUST BEARING MAY BE BENT DOWN TO CORRECT STALLING AND TO THE SIDE FOR TURN  
3. FINE TUNE TRIM BY MAKING SMALL CHANGES OF BALANCE POINT AND ELEVON SETTING

## FLAILING ARROW

TORQUELESS TALESS MK II

BY C.A. BUKOWSKI  
INKED BY BOB HUNT